


Sol*Aire Elements Range Towel Rail Brackets

ASSEMBLY

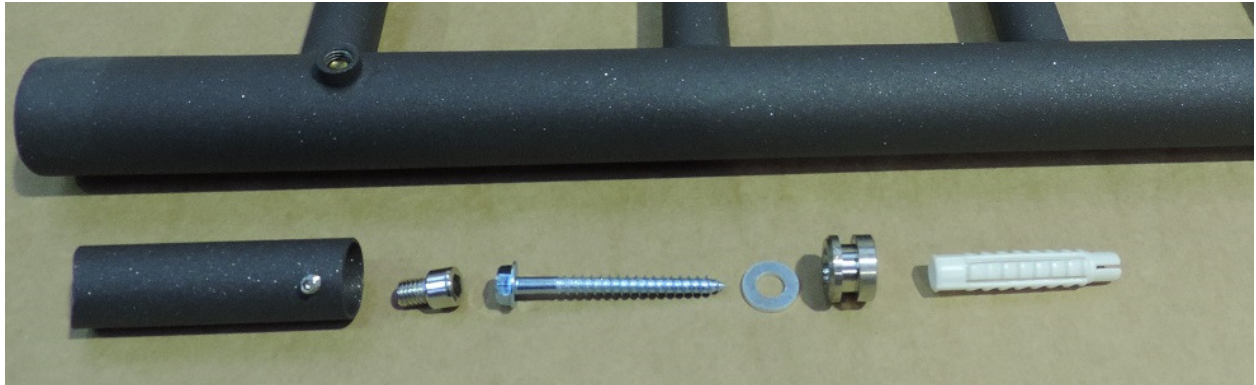

WALL BRACKET FIXING SCHEMATIC

1. Fix the tube to the towel rail through the welded washer inside, using the small stainless steel Allen head bolt.
2. Make sure the Allen head bolt is tight.
3. Mark the wall for the first fixing point.
4. Drill and plug the wall with the fixing supplied.
5. Put the supplied washer onto the large screw wall fixing supplied then fix the stainless support to wall making sure the thicker section is against the wall (as shown above).
6. Make sure the wall fixing is tight and secured.
7. The wall tube fastened to the towel rail will slip over the top of the wall fixing. It is secured using the small grub screw supplied.

It is easier to fasten all of the tubes to the towel rail first. Mark and fix one wall support at the top and place the rail over it. You can then easily level the rail and mark the wall for the 3 remaining fixings.

If you have any questions please do not hesitate to contact us directly on 01325 717899 or email info@solairehp.co.uk.